

EN

**Uses:** To colour and to intensify all König touch-up materials, except waterbased products. To colour Rex-Lith and Polyester Filling Lacquer.

DE

**Einsatzbereich:** Zum Einfärben und Anfeuern aller König Retuschiermaterialien, ausgenommen AQUA-Produkte. Zum Einfärben von Rex-Lith und Polyester-Füll-Lack.



215


# FARBKONZENTRAT

ZUM ABTÖNEN VON RETUSCHIERMATERIALIEN, REX-LITH UND POLYESTER-FÜLL-LACK.

EN

**COLOUR CONCENTRATE** | To colour touch-up materials, Rex Lith and Polyester Filling Lacquer.



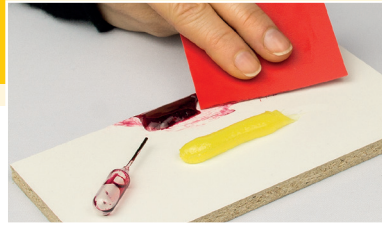

DE

**Einfärben von Retuschiermaterialien:** Zum Abtönen von König Retuschiermaterialien Tropfen des Konzentrates auf das Mischbrett geben und mit einem Pinsel das Konzentrat und die Farbe zum gewünschten Ton vermischen.

**Einfärben von Rex-Lith:** Zum Einfärben von Rex-Lith ein paar Tropfen Farbkonzentrat neben (oder auch auf) das Rex-Lith geben. Anschließend Konzentrat und Rex-Lith mischen, erst dann den Härter zugeben. Achtung: Der Anteil des Härters sollte nicht mehr als 3% der gefärbten Rex-Lith Mischung überschreiten (wenn Rex-Lith nicht gefärbt ist, beträgt der Anteil des Härters maximal 1,5%). Siehe auch Gebrauchsanweisung Rex-Lith.

**Einfärben von Polyester Füll-Lack:** Härter, Lack und Farbkonzentrat zusammen mischen. Danach etwa 1 Minute ruhen lassen, um eingeführte Luft entweichen zu lassen. Siehe auch Gebrauchsanweisung Polyester Füll-Lack.

EN

**Colour touch-up materials:** In order to intensify colours of König touch-up materials, apply some drops of Colour Concentrate to the mixing board and mix with the touch-up material the desired shade using a brush.

**Colouring Rex-Lith:** To dye Rex-Lith, just apply some drops of Colour Concentrate next to (or even directly on) the Rex-Lith. Mix Rex-Lith well with Colour Concentrate, before adding hardener to the compound. Important: The proportion of hardener should not exceed 3% of the coloured Rex-Lith compound (if Rex-Lith is not coloured, the proportion of hardener is 1.5% max.). Please also refer to Rex-Lith instructions.

**Colouring Polyester Filling Lacquer:** Mix hardener, Lacquer and Colour Concentrate. Wait approx. 1 minute until air, that has been stirred in, has escaped. Please also refer to Polyester Filling Lacquer instructions.

**162 001:** Arbeitsspatel, Spatula.

**429 123:** Fehhaar-Pinsel, Squirrel Hair Brushes.

**430 123:** Rotmarder-Pinsel, Red Marten Brushes.

**603 095:** Mischbrett, Mixing palette.

